

Rangemaster Not Working? Try These Checks First

Range cookers combine several appliances in one unit — these checks help narrow down what's actually gone wrong before booking an engineer.



01473 396496 • [ipswichappliancerepairs.co.uk](https://www.ipswichappliancerepairs.co.uk)

4 Things To Check Yourself First

These simple checks take a couple of minutes and could save you a call-out — or help our engineer diagnose the fault faster if you do book a repair.

1 Check The Clock Is Set Correctly

Like many built-in ovens, a lot of range cookers won't heat if the clock or timer has been left in a delay-cook setting — reset the clock and try again.

2 Check Nothing Has Tripped

If the whole unit or one zone has no power, check your consumer unit for a tripped breaker before assuming the appliance itself has failed.

3 Check Gas Ignition / Element Connections

On a dead hob ring, check gas models for a clean, unobstructed ignition point, or on electric models check the ring is seated correctly in its connector.

4

Check The Door Seal & Hinges

A door that isn't sealing properly, or has a worn hinge, can cause uneven cooking and heat loss — check for visible wear or debris trapped in the seal.

Still not working after these checks? That's completely normal — it just means the fault needs a proper diagnosis. Give us a call with the brand, model and what you've already tried.